

Portable DAB+ and FM Radio User Guide




- ◆ **DAB/DAB+ receiver**
- ◆ **Bluetooth player**
- ◆ **FM radio receiver**

Feature

- 1.The unit is with both DAB/DAB+ and FM receiver.
- 2.Receiver phone music to the unit by bluetooth wireless.
- 3.Stereo output.
- 4.Support 10 FM stations and 10 DAB stations presetting

Packing List

- dab receiver :1pcs
- USB line: 1 pcs
- Unit user guide :1 pcs

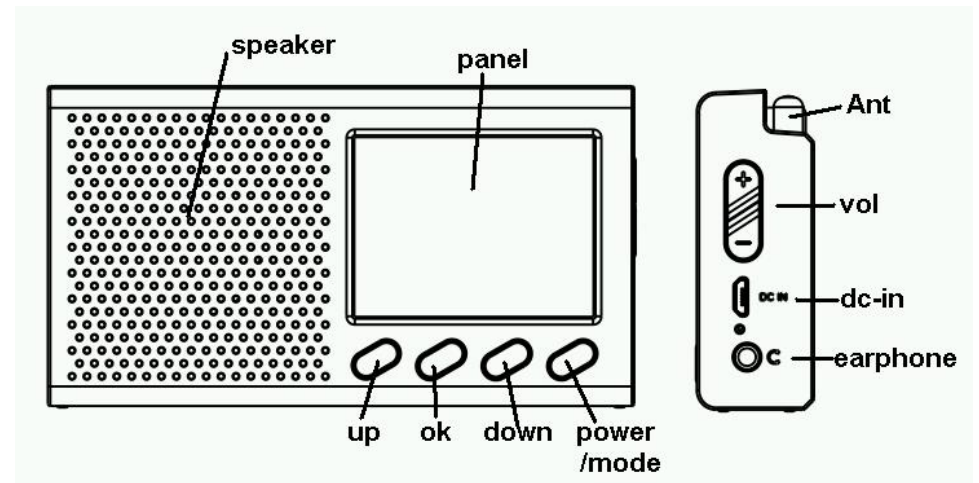

DC-in : 5V dc-in battery charge

Earphone jack: plug the headset and the sound is output only from the headset.

Ant: telescopic antenna.

Vol: Voice adjust long press tune out the favorite channels

Power/M	Long press button to turn on/off the unit. Short press exit main menu icon
OK	Confirm and enter function
PREV	Previous select
NEXT	Next select
Vol+/-	Volume adjust

Product Specification

- This digital audio broadcasting device is fully compatible with DAB ETSI 300 401 standard. Support ETSI TS102 563 DAB+ standard
- FM Frequency range 87.5-108MHz
- DAB Frequency range 170-240MHz
- Receiver sensitivity -99dBm
- Color LCD display:2.4 inch 320X240 pixels
- Bluetooth version: v4.2
- Micro USB 5V DC-in
- 3.5mm Stereo Headphone Output
- Antenna input: telescopic antenna.
- Built in 900ma 3.7V lithium battery
- Temperature: 0 °C~45°C
- Storage temperature: -20°C-70°C
- Operation relative humidity should be less than 80%(40 °C) as storage RH less than 95%(40 °C)

Product Maintenance

- ✧ Don't expose the unit to the liquid, humid or moist area as the set is not water proof.
- ✧ Don't attempt to clean this unit with chemical solvents as this might damage the finish.
- ✧ Avoid extremes of temperature either hot or cold, recharge under normal temperature.
- ✧ Don't touch sharp objects, which will cause scratches or damage
- ✧ Don't attempt to insert any object into the body to avoid damage the internal parts.
- ✧ Don't attempt to disassemble the unit for there is not any serviceable parts inside.
- ✧ If long time no use, be sure to play the unit in a dry area, avoid in a temperature changes and dusty place.
- ✧ Please save after rechargeable fully when unused for a long time (one-two month), to avoid completely discharge normally which lead to open improperly or not rechargeable.